


Refilling Instruction

saintink.com

not just ink but saintink for **Lexmark / Dell & SHARP** cartridges

Lexmark 10N0016, 10N0217, 12A1970, 12A1975, 13400HC, 1380620, 15M0850, 15M2971, 16G0055, 17G0050, 18C0032, 18C0034, 18C1428, 18C1528, 18C1530, 18C1623, 18L0032, 18Y0142, 18Y0144 / **Dell #** 922, 924, 926, 942, 944, 946, 948, 962, 964, 966, 968, A720, A920, A940, A960, J740 / **SHARP UX-22BC, UX-C70B**

For **Lexmark** 18C0032, 18C0034, 18C1428, 18C1528, 18C1623, 18Y0142, 18Y0144 / **Dell #** 922, 924, 926, 942, 944, 946, 948, 962, 964, 966, 968

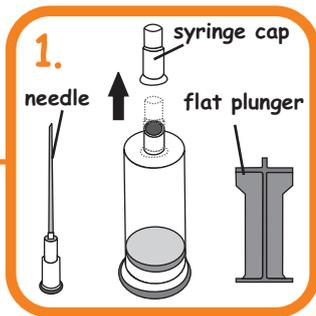

Setup the "Injection Tube" by removing the syringe cap then attach the needle & plunger to the ink tube.



Remove the label on the cartridge.



Push the needle into the cartridge and pull out a little (2mm). Slowly press the plunger to inject 8-10ml of ink into the cartridge. Ensure cartridge is in upright position. Stop filling if ink start to drip at print head.



Install cartridge to printer. Run the printer utilities and at dialog box, select "new cartridge".



Follow instruction on screen to complete installation of cartridge.
Reattach cap to needle, keep ink out of children reach and store ink in a cool and dry place.



Reminder

On some of the cartridges, the filling holes are very small use the drill bit to enlarge the hole.

For **Lexmark** 10N0016, 10N0217, 12A1970, 12A1975, 13400HC, 1380620, 15M0850, 15M2971, 16G0055, 17G0050, 18L0032 / **Dell #** A920, A940, A960, J740 / **SHARP UX-22BC, UX-C70B**

3. CHECK YOUR CARTRIDGE MODEL & Follow Instruction for Color To Be Refill



Drill a hole on the color cap of the cartridge.



Refilling for **Lexmark** 10N0016, 10N0217, 18L0032 / **Dell #** A720, A920, A940, A960, J740 / **SHARP UX-C70B**



Refilling for **Lexmark** 12A1970, 12A1975, 13400HC, 1380629, 15M0850, 15M2971, 17G0050, 17G0055

Push the needle into the cartridge and pull out a little (2mm). Slowly press the plunger to inject ink into the cartridge. Ensure cartridge is in upright position. Stop filling if ink start to drip at print head.



Install cartridge to printer. Run the printer utilities and at dialog box, select "new cartridge".



Follow instruction on screen to complete installation of cartridge.
Reattach cap to needle, keep ink out of children reach and store ink in a cool and dry place.



ATTN : The printer will not detect the ink level of a refilled cartridge. In this case, it is important that the monitoring of the ink level be done visually and top up the ink where necessary.

To continue printing without ink will damage the print head.