

Refilling Instruction


saintink.com

not just ink but saintink

for **Lexmark** & **Dell** cartridges

Lexmark 10N0026, 10N0227, 12A1980, 13619HC, 138619, 15M0920, 15M0120, 15M0125, 16G0065, 17G0060, 18C0033, 18C0035, 18C0190, 18C0781, 18C1429, 18C1529, 18C1624, 18L0000, 18L0042, 18Y0141, 18Y0143 / **Dell** # 725, 810, 922, 924, 926, 942, 944, 946, 948, 962, 964, 968, A720, A920, A940, A960, J740


For **Lexmark** 18C0033, 18C0035, 18C0190, 18C0781, 18C1429, 18C1529, 18C1624, 18Y0141, 18Y0143 / **Dell** # 725, 810, 922, 924, 926, 942, 944, 946, 948, 962, 964, 966, 968

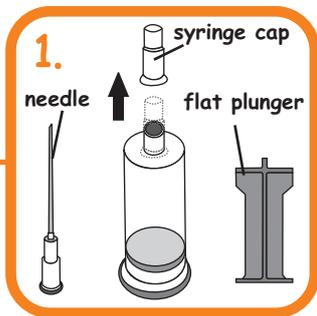

Setup the "Injection Tube" by removing the syringe cap then attach the needle & plunger to the ink tube.



Remove the label on the cartridge.

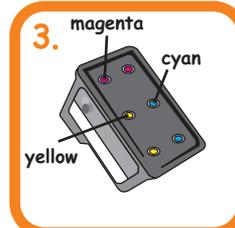

Study the position of the color and ensure the right color ink is injected into the cartridge.




Push the needle into the cartridge and pull out a little (2mm). Slowly press the plunger to inject 3-5ml of ink into the cartridge. Ensure cartridge is in upright position. Stop filling if ink start to drip at print head.



Install cartridge to printer. Run the printer utilities and at dialog box, select "new cartridge".

6. Follow instruction on screen to complete installation of cartridge.

7. Reattach cap to needle, keep ink out of children reach and store ink in a cool and dry place.

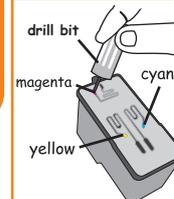

Reminder

On some of the cartridges, the filling holes are very small use the drill bit to enlarge the hole.

For **Lexmark** 10N0026 & 10N0227, 12A1980, 13619HC, 1380619, 15M0120, 15M0125, 15M0920, 16G0065, 17G0060, 18L0000, 18L0042 / **Dell** # 922, 924, 926, 942, 944, 946, 948, 962, 964, 966, 968, A720, A920, A940, A960, J740




Slit the color lid and base at the 4 corners of the cartridge using a cutter.




Pry open the color lid with cutter to remove it from the base.


4. CHECK YOUR CARTRIDGE MODEL & Follow Instruction for Color To Be Refill

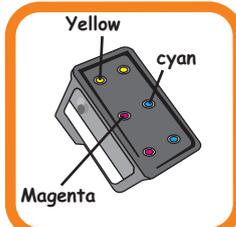

Lexmark 10N0026 & 10N0227 / **Dell** # A720, A920

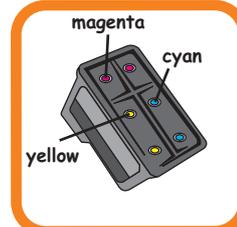

Dell # A940, A960, J740

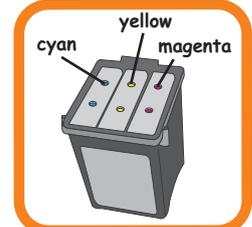

Lexmark 12A1980, 13619HC, 1380619, 15M0120, 15M0125, 15M0920, 16G0065

Study the position of the color and ensure the right color ink is injected into cartridge.



Push the needle into the cartridge and pull a little (2mm). Slowly press the plunger to inject 3-5ml of ink into the cartridge. Ensure cartridge is in upright position. Stop filling if ink start to drip at print head.



Reattach the lid to the base and hold it on with the tape provided.



Install cartridge to printer. Run the printer utilities and at dialog box, select "new cartridge".

8. Follow instruction on screen to complete installation of cartridge.
9. Reattach cap to needle, keep ink out of children reach and store ink in a cool and dry place.

ATTN : The printer will not detect the ink level of a refilled cartridge. In this case, it is important that the monitoring of the ink level be done visually and top up the ink where necessary.
To continue printing without ink will damage the print head.

