
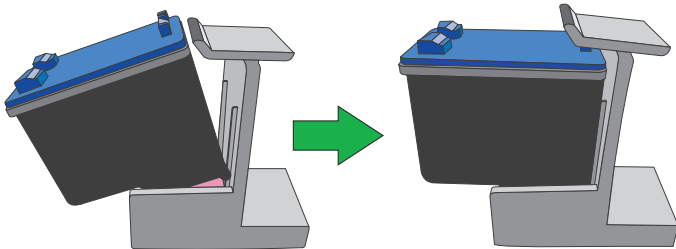



Instruction Manual

Attention :

The BLACK rubber pad is inserted for black color of the PG-210/ PG-510/ PG-810 cartridges, the RED rubber pad is for yellow color of the CL-211/ CL-511/ CL-811 cartridges and the BLUE rubber pad is for magenta and cyan color of the CL-211/ CL-511/ CL-811 cartridges.

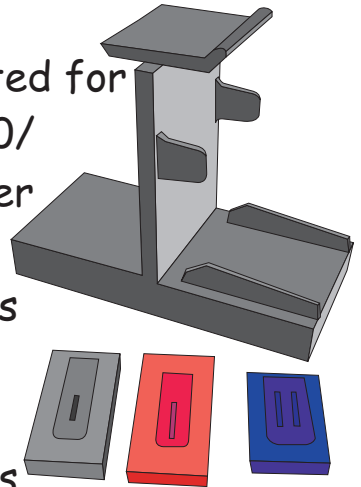

Insert the cartridge into the holder and push the top of the cartridge all the way in until you hear it "clicking".

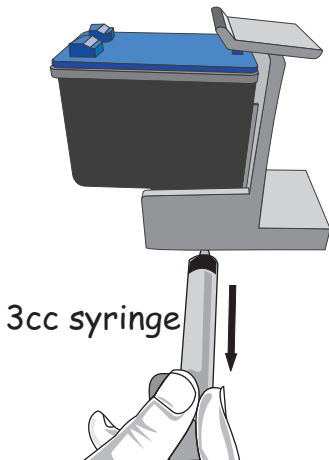

Connect the syringe 3cc to the rubber hole of the holder and slowly suck out about 0.5ml of ink from the cartridge. Remove the cartridge from holder and clean the excessive ink around the nozzle, dabbing the nozzle part on soft tissue. Install the cartridge into the printer, and run "head cleaning" process before use.